

18 Channels (Mode 1):

CHANNEL	VALUE	FUNCTION
1	000-255	PAN 0°→540°
2	000-255	PAN FINE
3	000-255	TILT 0°→260°
4	000-255	TILT FINE
5	000-255	PAN/TILT SPEED Fast to Slow
6	000-007	COLOR WHEEL Open
	008-010	Color 1
	011-013	Color 2
	014-016	Color 3
	017-019	Color 4
	020-022	Color 5
	023-025	Color 6
	026-028	Color 7
	029-031	Color 8
	032-034	Color 9
	035-037	Color 10
	038-040	Color 11
	041-043	Color 12
	044-046	Color 13
	047-049	Color 14
	050-063	Color 15
	064-127	Color Wheel Indexing
128-189	Clockwise Rotation, Fast to Slow	
190-193	Stop	
194-255	Counter-Clockwise Rotation, Slow to Fast	
7	000-007	ROTATING GOBO WHEEL Open
	008-012	Gobo 1
	013-017	Gobo 2
	018-022	Gobo 3
	023-027	Gobo 4
	028-032	Gobo 5
	033-037	Gobo 6

	038-042 043-047 048-052 053-057 058-063 064-068 069-073 074-078 079-083 084-088 089-093 094-098 099-103 104-108 109-113 114-127 128-189 190-193 194-255	Gobo 7 Gobo 8 Gobo 9 Gobo 10 Gobo 11 Gobo1 Shaking, Slow to Fast Gobo 2 Shaking, Slow to Fast Gobo 3 Shaking, Slow to Fast Gobo 4 Shaking, Slow to Fast Gobo 5 Shaking, Slow to Fast Gobo 6 Shaking, Slow to Fast Gobo 7 Shaking, Slow to Fast Gobo 8 Shaking, Slow to Fast Gobo 9 Shaking, Slow to Fast Gobo 10 Shaking, Slow to Fast Gobo 11 Shaking, Slow to Fast Counter-Clockwise Rotation, Fast to Slow Stop Clockwise Rotation, Slow to Fast
8	000-127 128-189 190-193 194-255	GOBO WHEEL ROTATION Gobo Wheel Index, 0%→100% Clockwise Rotation, Fast to Slow Stop Counter-Clockwise Rotation, Slow to Fast
9	000-007 008-255	PRISM 1 (24-facet prism) Close Open
10	000-127 128-189 190-193 194-255	R-PRISM 1 Index, 0%→100% Clockwise Rotation, Fast to Slow Stop Counter-Clockwise Rotation, Slow to Fast
11	000-007 008-255	PRISM 2 (8-facet prism) Close Open
12	000-127 128-189 190-193 194-255	R-PRISM 2 Index, 0%→100% Clockwise Rotation, Fast to Slow Stop Counter-Clockwise Rotation, Slow to Fast

13	000-007	STROBE Close
	008-015	Open
	016-131	Strobe from Slow to Fast
	132-139	Open
	140-181	Slow Open Fast Close from Slow to Fast
	182-189	Open
	190-231	Fast Open Slow Close from Slow to Fast
	232-239	Open
	240-247	Random Strobe from Fast to Slow
	248-255	Open
14	000-255	DIMMER 0%→100%
15	000-255	DIMMER FINE
16	000-255	FOCUS 0%→100%
17	000-255	FOCUS FINE
18	000-139	FUNCTION No Function
	140-149	Reset Pan/Tilt
	150-159	Reset Effect
	160-199	No Function
	200-209	Reset All
	210-255	No Function