

19 Channels (Mode 1):

CHANNEL	VALUE	FUNCTION
1	000-255	PAN 0°→540°
2	000-255	PAN FINE
3	000-255	TILT 0°→260°
4	000-255	TILT FINE
5	000-255	PAN/TILT SPEED Fast to Slow
6	000-007	COLOR Open
	008-011	Color 1
	012-015	Color 2
	016-019	Color 3
	020-023	Color 4
	024-027	Color 5
	028-031	Color 6
	032-035	Color 7
	036-039	Color 8
	040-043	Color 9
	044-047	Color 10
	048-051	Color 11
	052-055	Color 12
	056-059	Color 13
	060-063	Color 14
	064	White
	065	White+Color 1
	066	Color 1
	067	Color 1+Color 2
	068	Color 2
069	Color 2+Color 3	
070	Color 3	
071	Color 3+Color 4	
072	Color 4	
073	Color 4+Color 5	
074	Color 5	
075	Color 5+Color 6	
076	Color 6	

	077	Color 6+Color 7
	078	Color 7
	079	Color 7+Color 8
	080	Color 8
	081	Color 8+Color 9
	082	Color 9
	083	Color 9+Color 10
	084	Color 10
	085	Color 10+Color 11
	086	Color 11
	087	Color 11+Color 12
	088	Color 12
	089	Color 12+Color 13
	090	Color 13
	091	Color 13+Color 14
	092	Color 14
	093	Color 14+White
	094-127	White
	128-189	Counter-Clockwise Rotation, Fast to Slow
	190-193	Stop
	194-255	Clockwise Rotation, Slow to Fast
		GOBO
	000-007	Open
	008-011	Gobo1
	012-014	Gobo2
	015-018	Gobo3
	019-021	Gobo4
	022-025	Gobo5
	026-028	Gobo6
	029-032	Gobo7
	033-035	Gobo8
	036-039	Gobo9
	040-042	Gobo10
	043-049	Gobo11
	050-056	Gobo12
	057-063	Gobo13
	064-067	Gobo1 Shaking, Slow to Fast
	068-071	Gobo2 Shaking, Slow to Fast
	072-075	Gobo3 Shaking, Slow to Fast
	076-079	Gobo4 Shaking, Slow to Fast
	080-083	Gobo5 Shaking, Slow to Fast
7		

	084-087 088-091 092-095 096-099 100-103 104-111 112-119 120-127 128-189 190-193 194-255	Gobo6 Shaking, Slow to Fast Gobo7 Shaking, Slow to Fast Gobo8 Shaking, Slow to Fast Gobo9 Shaking, Slow to Fast Gobo10 Shaking, Slow to Fast Gobo11 Shaking, Slow to Fast Gobo12 Shaking, Slow to Fast Gobo13 Shaking, Slow to Fast Clockwise Rotation, Fast to Slow Stop Counter-Clockwise Rotation, Slow to Fast
8	000-007 008-131 132-255	SOFT FILTER Open Soft Filter 1 Soft Filter 2
9	000-007 008-255	PRISM 1 (8-facet prism) Close Open
10	000-127 128-189 190-193 194-255	PRISM 1 ROTATION Prism Index Clockwise Rotation, Fast to Slow Stop Counter-Clockwise Rotation, Slow to Fast
11	000-007 008-255	PRISM 2 (24-facet prism) Close Open
12	000-127 128-189 190-193 194-255	PRISM 2 ROTATION Prism Index Clockwise Rotation, Fast to Slow Stop Counter-Clockwise Rotation, Slow to Fast
13	000-007 008-255	FROST Close Open
14	000-255	FOCUS 0%→100%
15	000-255	FOCUS FINE
16	000-007 008-015	STROBE Close Open

	016-131 132-139 140-181 182-189 190-231 232-239 240-247 248-255	Strobe from Slow to Fast Open Slow Open Fast Close from Slow to Fast Open Fast Open Slow Close from Slow to Fast Open Random Strobe from Slow to Fast Open
17	000-255	DIMMER 0%→100%
18	000-255	DIMMER FINE
19	000-129 130-139 140-149 150-159 160-199 200-209 210-211 212-213 214-215 216-217 218-229 230-239 240-255	SPECIAL FUNCTION Null Lamp On Pan/Tilt Reset Effect Reset Null Reset All Gobo Short Cut: Enable Gobo Short Cut: Disable Color Short Cut: Enable Color Short Cut: Disable Null Lamp Off Null

17 Channels (Mode 2):

CHANNEL	VALUE	FUNCTION
1	000-255	PAN
		0°→540°
2	000-255	PAN FINE
3	000-255	TILT
		0°→260°
4	000-255	TILT FINE
5	000-255	PAN/TILT SPEED
		Fast to Slow
6	000-003	COLOR Open
	004-007	Color 1
	008-011	Color 2
	012-015	Color 3
	016-019	Color 4
	020-023	Color 5
	024-027	Color 6
	028-031	Color 7
	032-035	Color 8
	036-039	Color 9
	040-043	Color 10
	044-047	Color 11
	048-051	Color 12
	052-055	Color 13
	056-059	Color 14
	060-127	Color Wheel Indexing
	128-189	Counter-Clockwise Rotation, Fast to Slow
	190-193	Stop
194-255	Clockwise Rotation, Slow to Fast	
7	000-007	GOBO Open
	008-010	Gobo1
	011-013	Gobo2
	014-016	Gobo3
	017-019	Gobo4
	020-022	Gobo5
	023-025	Gobo6
	026-028	Gobo7

	029-031 032-034 035-037 038-040 041-043 044-046 047-049 050-052 053-055 056-059 060-063 064-067 068-071 072-075 076-079 080-083 084-087 088-091 092-095 096-099 100-103 104-107 108-111 112-115 116-119 120-127 128-189 190-193 194-255	Gobo8 Gobo9 Gobo10 Gobo11 Gobo12 Gobo13 Gobo14 Gobo15 Gobo16 White Shaking, Slow to Fast Gobo1 Shaking, Slow to Fast Gobo2 Shaking, Slow to Fast Gobo3 Shaking, Slow to Fast Gobo4 Shaking, Slow to Fast Gobo5 Shaking, Slow to Fast Gobo6 Shaking, Slow to Fast Gobo7 Shaking, Slow to Fast Gobo8 Shaking, Slow to Fast Gobo9 Shaking, Slow to Fast Gobo10 Shaking, Slow to Fast Gobo11 Shaking, Slow to Fast Gobo12 Shaking, Slow to Fast Gobo13 Shaking, Slow to Fast Gobo14 Shaking, Slow to Fast Gobo15 Shaking, Slow to Fast Gobo16 Shaking, Slow to Fast Clockwise Rotation, Fast to Slow Stop Counter-Clockwise Rotation, Slow to Fast
8	000-007 008-255	PRISM 1 (8-facet prism) Close Open
9	000-127 128-189 190-193 194-255	PRISM 1 ROTATION Prism Index Clockwise Rotation, Fast to Slow Stop Counter-Clockwise Rotation, Slow to Fast
10	000-007 008-255	PRISM 2 (24-facet prism) Close Open

<p>11</p>	<p>000-127 128-189 190-193 194-255</p>	<p>PRISM 2 ROTATION Prism Index Clockwise Rotation, Fast to Slow Stop Counter-Clockwise Rotation, Slow to Fast</p>
<p>12</p>	<p>000-007 008-015 016-131 132-167 168-203 204-239 240-247 248-255</p>	<p>STROBE Close Open Strobe from Slow to Fast Slow Open Fast Close from Slow to Fast Fast Open Slow Close from Slow to Fast Pulsation from Slow to Fast Random Strobe from Slow to Fast Open</p>
<p>13</p>	<p>000-255</p>	<p>DIMMER 0%→100%</p>
<p>14</p>	<p>000-255</p>	<p>FOCUS 0%→100%</p>
<p>15</p>	<p>000-255</p>	<p>FOCUS FINE</p>
<p>16</p>	<p>000-007 008-255</p>	<p>FROST Close Open</p>
<p>17</p>	<p>000-129 130-139 140-149 150-159 160-169 170-179 180-199 200-209 210-211 212-213 214-215 216-217 218-229 230-239 240-255</p>	<p>SPECIAL FUNCTION Null Lamp On Pan/Tilt Reset Effect Reset Soft Filter Out Soft Filter 1 Soft Filter 2 Reset All Gobo Short Cut: Enable Gobo Short Cut: Disable Color Short Cut: Enable Color Short Cut: Disable Null Lamp Off Null</p>